


EXPLORER COMPACT

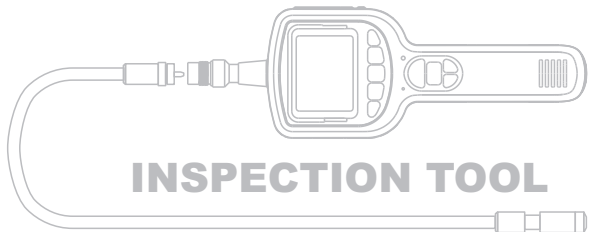

INSPECTION TOOL

Model: GL8822, GL8823

EU Environmental Protection


Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.



PAP

EXPLORER COMPACT USER MANUAL

Inspection Camera
with Recordable Monitor

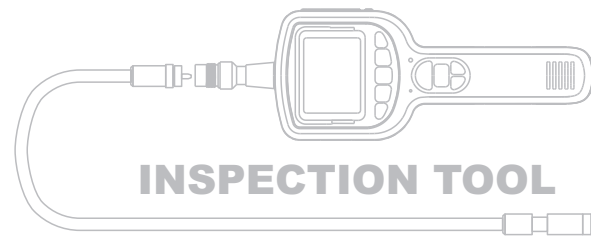

INSPECTION TOOL

Model: GL8822, GL8823

Version 1.1

Please read this user manual carefully before using this product.
Failure to understand operation procedures may result in injury.

General Safety Information	02
Welcome	03
Features	03
Packing List	03
Structure	04
Installation	05
Operation	07
Switch on Camera	07
Zoom in Picture	07
LEDs Brightness Control	08
Recording Video	08
Taking Photos	08
Playback Video/picture	09
Deleting Video/picture	09
Deleting Folder	10
How to Enter the Setting Mode	10
Language Setting	10
Video System Setting	11
Formatting	11
Default Setup	11
View Version Information	11
Date/time Setting	11
Frame Rate Setting	12
Time Stamp Setting	12
Event Playback	12
Specifications	13
FCC Information	14

* GL8822 = GL8807(handle) + GT4802(camera)
 GL8823 = GL8809(handle) + GT4803(camera)

GENERAL SAFETY INFORMATION

WARNING! Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire and/or serious personal injury.

SAVE THESE INSTRUCTIONS!

- ※ Prevent object and liquid entry. Never spill liquid of any kind on the video display unit. Liquid increases the risk of electrical shock and damage to the product.
- ※ The unit is not shock-resistant. Do not use Explorer Compact as a hammer and avoid high impact resultant from things such as dropping the unit from height
- ※ Do not immerse camera handle or LCD screen in water. Avoid moisture, and store product in a dry place. Such measures reduce the risk of electric shock and damage. **The lens and the tube are water resistant when the unit is fully assembled, but the LCD screen and handle are not.**
- ※ Do not use the camera if condensation forms inside the lens. Let the water evaporate before using again.
- ※ Turn off the system if it is not in use.
- ※ Attention should be given to the environmental aspects of battery disposal.
- ※ Remove the batteries when cleaning the unit.
- ※ Remove the batteries before storing the unit for a long time.
- ※ When necessary, REPLACE ALL FOUR (4) BATTERIES in this unit with new ones, not one (1) or two (2) batteries at a time.
- ※ Use only the size and type of battery specified.
- ※ Be sure to install the battery with the correct polarity as indicated in the battery compartment.
- ※ Properly dispose of batteries. Exposure to high temperatures can cause batteries to explode, so do not dispose of in a fire. Place tape over the terminals to prevent direct contact with other objects.
- ※ Some countries have regulations concerning battery disposal. Please follow all applicable regulations.

WELCOME

Congratulations on your purchase of our inspection video camera with recordable color LCD screen, the EXPLORER COMPACT. Please read the user manual carefully before using this product. This product is designed as a remote inspection device, capable of recording video/taking pictures. Appropriate for use in surveying pipes or other hard-to-reach places, equipment or furnishing installation, car repair, etc. Features include waterproof LED lens, real-time recording, and micro SD card storage.

FEATURES

- Allows for easy surveying of small, hard-to-reach places
- Mini water-proof camera with 1m (3ft.) flexible extended tube
- Manufactured and tested to IP67 waterproof standard
- 2.7" TFT-LCD monitor
- OSD manu for operation
- Video recording capability, supports up to 32GB micro SD card
- Adjustable brightness on lens-mounted LED light
- 3 useful accessories included: hook, mirror and magnet
- Lightweight, handheld design, flexible and convenient to use

PACKING LIST



Handle with LCD screen
x 1



USB cable
x 1



Video cable
x 1

(Optional)



Micro
SD Card

Only for GL8822



Mini 17mm Waterproof LED Lens



Hook x 1



Magnet x 1



Mirror x 1

(Optional)



Extension Tube

Only for GL8823



Mini 9mm Waterproof LED Lens



Hook x 1



Magnet x 1




Mirror x 1



Rubber ring x 1


STRUCTURE

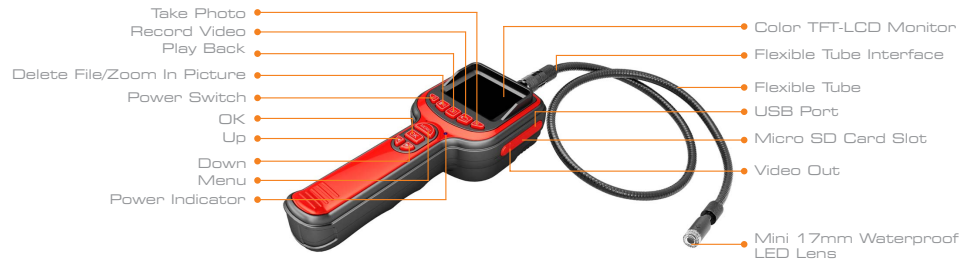

INSTALLATION


To Install Batteries (Dry your hands before installation or replacing batteries.)

1. Remove battery cover;
2. Insert four (4) AA batteries into their appropriate slots, with proper orientation, as indicated on the battery compartment;
3. Replace battery cover.

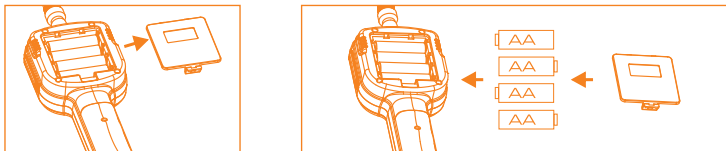

To Attach Flexible Tube with Handle

To connect the flexible tube camera with control handle, first make sure that the keyed end of the tube is aligned with the slot in the handle, then use slight force to push them together. Once properly aligned, twist the treaded knob clockwise until the connection is securely in place.

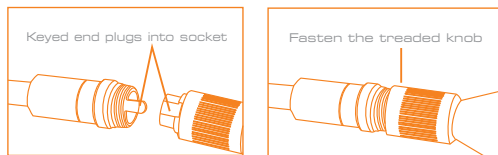

To Install Extension Tube



To connect the extension tube, first align the keyed end with the slot in the handle. Use slight force to push them together. Once properly aligned, twist the treaded knob clockwise until the connection is securely in place. Repeat this process to connect the other end of extension tube to flexible camera tube.





To Install Accessories

The three (3) included accessories (mirror, hook and magnet) are all attached to the camera in the same way as illustrated below:

For GL8822

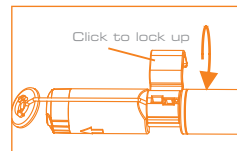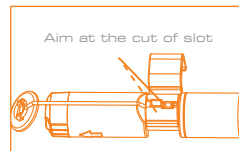

For GL8823

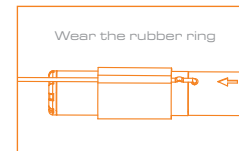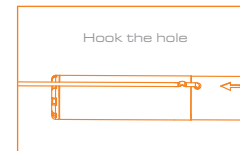


For GL8822: to prepare accessory for installation, push down on stem-side of black interface while pulling away from adjacent side. This will open the base of the accessory. Next, align inside of stem-side to either treaded surface at the base of camera head. Tighten to secure the accessory in place.

To Insert SD Card


After SD card is inserted into SD card slot successfully, an SD card icon will appear on the monitor screen; otherwise, the 'no SD card' icon will show.

NOTE: If the device fails to read the TF card due to late insertion or some problem of the TF card, the screen displays "FORMAT TF CARD". If the TF card is in normal condition, press OK; otherwise, press YES to format the TF card.

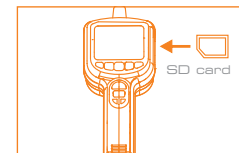

To Connect USB Cable

Use the provided USB cable to connect the product to any PC with a USB slot. Your computer should automatically recognize the new hardware, which you may browse by double-clicking on the My Computer icon on your desktop, and then navigating into the Mobile Disk directory.

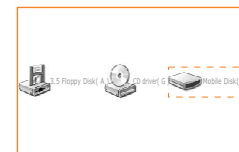




Video Output

Insert video cable into the video out socket of the monitor, insert the other end of the cable into the video in jack of any compatible TV or display device. The LCD monitor is now capable of outputting high quality video to another display.

OPERATION

Switch on Camera

1. Press and hold on the power switch for about 3 seconds to turn on the camera, the power indicator will illuminate and the LCD will become viewable.

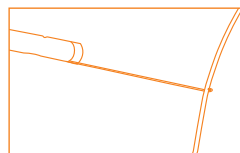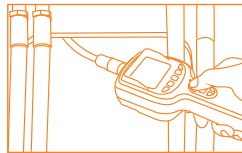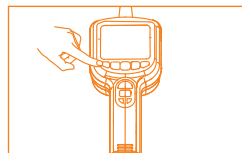


2. When in use, the tube should easily maneuver itself into position. Do not apply excessive force.
3. The flexible tube can be bent into numerous shapes that may help you explore areas you otherwise thought were impossible to see.
4. The accessories included with EXPLORER COMPACT can be used to retrieve small items like dropped rings or screws.

Zoom in Picture

In real-time monitoring mode, press the  button to zoom in (1.0X, 1.5X, 2.0X,3.0X) the picture.

LEDs Brightness Control

The 5 levels of LED brightness can be adjusted by pressing the  and  button in real-time monitoring or recording video mode.

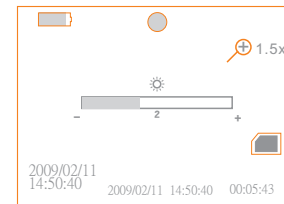

Recording Video

1. In real-time monitoring mode, press the  button to begin recording;
2. Press again to stop recording.

Notice!

 
- * The video will be automatically saved as an individual file every 30 minutes.
- * "Memory Full" appears on the LCD screen indicates that the SD card memory is full.

Taking photos




In real-time monitoring mode, press the  button to take a photo.

Notice!

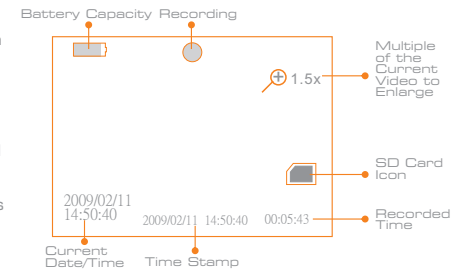- * "Memory Full" appears on the LCD screen indicates that the SD card memory is full.



Playback Video/Picture

1. In real-time monitoring mode, press the  button to toggle to the video/picture folder.
2. Press the  and  buttons to select your desired folder, and then the press OK button to toggle to the right interface:

Notice! * Mark  next to a file name indicates that the file is a video. mark  next to a file indicates that the file is a picture.

3. for playback video:

Press the  or  button to select your desired video, and then press OK button to playback.



Pause: press the OK button once to pause, press again to resume play;



Fast Forward: press and hold on the  button until the Current Playback Mode Icon switch to ;

Rewind: press and hold on the  button until the Current Playback Mode Icon switch to ;







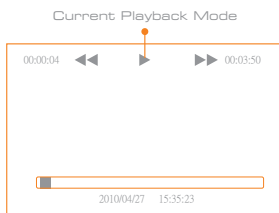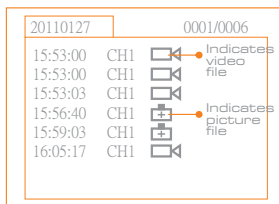



Stop/Exit: press the MENU button.


for view pictures:

Press the  or  button to select your desired video, press OK or MENU button to view and press again to exit.




Deleting Video/Picture

1. In real-time monitoring mode, press the  button to toggle to the video/picture folder.
2. Press the  or  button to select your desired folder, and then press OK button.
3. Press the  or  button to select your desired file, and then press the  button and the right interface appears:
4. Press the  or  button to toggle between  and , that is, to cancel or delete. Once you have highlighted your desired selection, press the OK button.

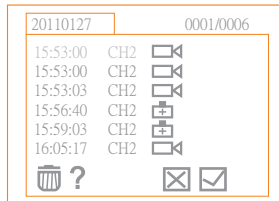


Deleting Folder

Deleting a folder is done in the same way as deleting a single file.

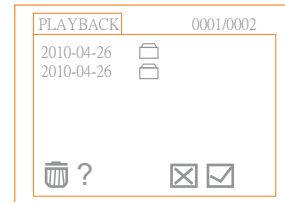





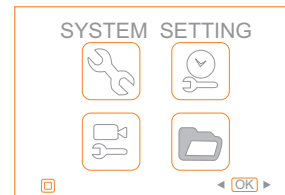


How to enter the Setting Mode

In real-time monitoring mode, press the MENU button:







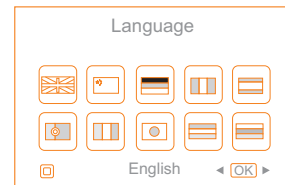

Language Setting







1. In the setting mode, press the  or  button to select 'SYSTEM SETTING', and then press OK button.
2. Press the  or  button to select 'Language', and then press OK button, the following interface will appear:
3. Press the  or  button to select your desired language.
4. Press OK button to confirm and press MENU button to exit.









Video System Setting

1. In the setting mode, press the  or  button to select 'SYSTEM SETTING', and then press OK button.
2. Press the  or  button to select 'Video System' and then press OK button.
3. Press the  or  button to toggle between NTSC and PAL. Once your desired system is selected, press OK button to confirm and press the MENU button to exit.





Formating

1. In the setting mode, press the  or  button to select 'SYSTEM SETTING ', and then press OK button.
2. Press the  or  button to select 'Format', and then press OK button.
3. Press the  or  button to toggle between YES and NO, that is, to format or cancel. Press the OK button to confirm and press the MENU button to exit.





Default Setup


1. In the setting mode, press the  or  button to select 'SYSTEM SETTING ', and then press OK button.
2. Press the  or  button to select 'Default Setup' and then press OK button.
3. Press the  or  button to toggle between YES and NO, that is to restore default or cancel. Press the OK button to confirm and press the MENU button to exit..

View Version Information





1. In the setting mode, press the  or  button to select 'SYSTEM SETTING', and then press OK button.
2. Press the  or  button to select 'Version' and then press OK button. You will now be able to view the version details of your product.

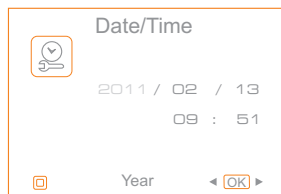Date/Time Setting

1. In the setting mode, press the  or  button to select 'Date/Time' and then press OK button, The right interface will appear:
2. Press OK button to select Date or Time;
Press the  or  button to adjust selection;
Press the MENU button to confirm and exit.





Frame Rate Setting

1. In the setting mode, press the  or  button to select 'RECORDER SETTING', and then press OK button.
2. Press the  or  button to select 'Frame Rate' and then press OK button.
3. Press the  or  button to toggle between different frame rates. Once your desired rate is selected, press OK button to confirm and press the MENU button to exit.

Time Stamp Setting

1. In the setting mode, press the  or  button to select 'RECORDER SETTING', and then press OK button.
2. Press the  or  button to select 'Time Stamp' and then press OK button.
3. Press the  and  buttons to toggle between On and Off. Once your desired selection is made, press OK button to confirm and press the MENU button to exit.

Event Playback

1. In the setting mode, press the  or  button to select 'EVENT PLAYBACK', and then press OK button.
2. Refer to user manual instructions on Playback of Video/Picture, Deleting Video/Picture, and Deleting Folder for guidance.

SPECIFICATIONS

	Model No.	GL6822	GL6823
camera	Imaging Sensor	CMOS	
	Total Pixels	640 x 480 (PAL); 640 x 480 (NTSC)	
	Horizontal Viewing Angle	50°	36°
	Minimum Illumination	0 Lux	
	Power Supply	4 x AA batteries	
	Waterproof Capacity	IP67 (for lens/tube only)	
	LCD Screen Type	2.7" TFT-LCD	
	Tube Diameter	17mm	9mm
	LCD Effective Pixels	960 x 240	
	Video System	PAL/NTSC	
	Capacity of SD Card	Support up to 32GB	
	Picture Type	.JPEG	
	Video Type	.AVI	
	Picture/Video Pixels	640 x 480	
	Video Size	27M byte/minute	
	Frame Rate	5-30 frame/second (optional)	
	Data Transmission	USB 2.0	
	Dimensions (W x D x H)	263 x 86 x 49(mm) (Excluding Flexible Tube)	
	Approx. Weight	484g	420g
	Operating Temperature	-10°C-50°C/14°F-122°F	
Operating Humidity (Max.)	15-85%RH		

* All specifications are subject to minor change without prior notice.

FCC INFORMATION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference;
- (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The graphics included in this user manual are subject to minor change without notice.