Tel/tronix[®]

Serial Triggering and Analysis Application Modules

AERO • AUDIO • AUTO • AUTOMAX • COMP • EMBD • FLEX • USB • ENET Datasheet




Key features

- Automated Serial Triggering, Decode, and Search options for I²C, SPI, CAN, CAN FD, LIN, FlexRay, RS-232/422/485/UART, MIL-STD-1553, I²S/LJ/ RJ/T DM, USB, and Ethernet.
- Trigger on all the critical elements of a serial bus such as address, data, etc.
- Decode all the critical elements of each message. No more counting 1s and 0s!
- Search through long acquisitions using user-defined criteria to find specific messages. Search mark table provides a tabular view of the events found during an automated search.
- Export Search Mark table data to .csv file.
- Event table shows decoded serial bus activity in a tabular, timestamped format for quick summary of system activity.
- Export Event table data to .csv file.

Serial triggering and analysis application modules

On a serial bus, a single signal often includes address, control, data, and clock information. This can make isolating events of interest difficult. The Serial Application modules for the MDO4000C, MDO3000, and MSO/DPO2000B Series transform the oscilloscope into a robust tool for debugging serial buses with automatic trigger, decode, and search for I²C, SPI, CAN, CAN FD, LIN, FlexRay, RS-232/422/485/UART, MIL-STD-1553, I²S/LJ/RJ/TDM, USB2, and Ethernet.

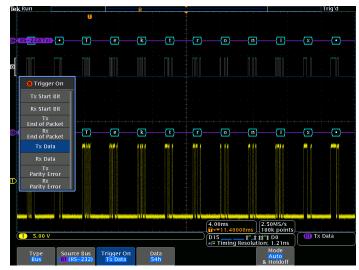

Triggering on a specific transmit data packet going across an RS-232 bus. A complete set of triggers, including triggers for specific serial packet content, ensures you quickly capture your event of interest.

Serial triggering


Trigger on packet content such as start of packet, specific addresses, specific data content, unique identifiers, etc. on popular serial interfaces such as I²C, SPI, CAN, CAN FD, LIN, FlexRay, RS-232/422/485/UART, MIL-STD-1553, and I²S/LJ/RJ/TDM, USB2, and Ethernet.

Bus display


Provides a higher-level, combined view of the individual signals (clock, data, chip enable, etc.) that make up your bus, making it easy to identify where packets begin and end and identifying sub-packet components such as address, data, identifier, CRC, etc.

Bus decoding

Tired of having to visually inspect the waveform to count clocks, determine if each bit is a 1 or a 0, combine bits into bytes, and determine the hex value? Let the oscilloscope with a Serial Application module do it for you! Once you've set up a bus, the oscilloscope will decode each packet on the bus, and display the value in hex, binary, decimal (LIN, MIL-STD-1553, and FlexRay, USB and Ethernet only), signed decimal (I²S/LJ/RJ/TDM only), or ASCII (RS-232/422/485/UART, USB and Ethernet only) in the bus waveform.

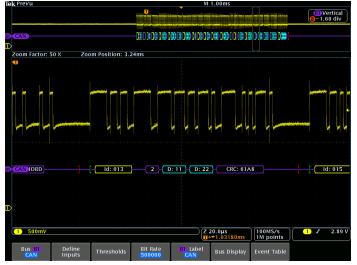

Color-coded display of a CAN bus, showing Start, DLC, Data, CRC, and Stop components of the serial signal.

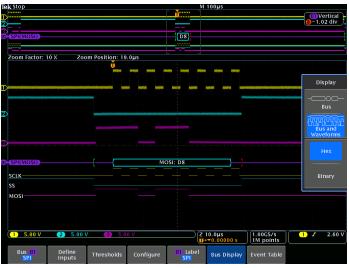

Simultaneously display the bus and digital waveforms. Digital waveforms show how the bus translates the individual signals based on the threshold settings (useful for making analog channels look like just 1s and 0s).

Event table


In addition to seeing decoded packet data on the bus waveform itself, you can view all captured packets in a tabular view much like you would see in a software listing. Packets are time stamped and listed consecutively with columns for each component (Address, Data, etc.).



Event table showing decoded Identifier, DLC, DATA, and CRC for every CAN packet in a long acquisition

Search

Serial triggering is very useful for isolating the event of interest, but once you've captured it and need to analyze the surrounding data, what do you do? In the past, users had to manually scroll through the waveform counting and converting bits and looking for what caused the event. With a Serial Application module, you can enable the oscilloscope to automatically search through the acquired data for user-defined criteria including serial packet content. Each occurrence is highlighted by a search mark. Rapid navigation between marks is as simple as pressing the Previous (\leftarrow) and Next (\rightarrow) buttons on the oscilloscope front panel. The Search Mark table provides a tabular view of all events found during an automated search. The search mark data can be exported to a .csv file.

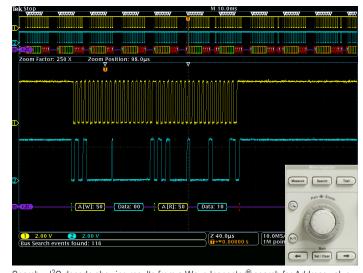

Search – I²C decode showing results from a Wave Inspector[®] search for Address value 50. Wave Inspector[®] controls provide unprecedented efficiency in viewing and navigating waveform data.

Specifications

I²C Characteristics

Bus setup options

Sources (Clock and Data) Analog channels 1-4


Digital channels D0-D15

Thresholds Per-channel thresholds

Recommended probing Single ended Include R/W in address Yes or No Decode formats available Hex, Binary

Display modes

Mode	Description
Bus	Bus only
Bus and waveforms	Simultaneous display of bus and logic waveforms
Event table	Decoded packet data in a tabular view

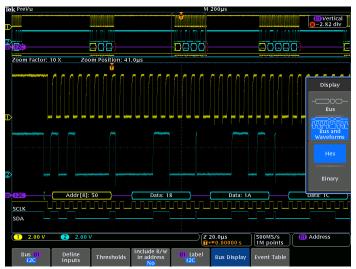


I²C bus setup, showing selection of bus display modes.

I²C Characteristics

Bus trigger and search options


Characteristic	Description
Trigger and/or Search On	Start
	Stop
	Repeated Start
	Missing Ack
	Address (7 or 10 bit) with R/W Selection
	Data (number of bytes 1-5)
	Address and Data

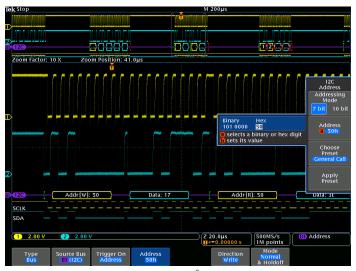

Triggering on a specific address value on the I²C bus.

Bus decode

Characteristic	Description
Maximum Clock/Data Rate	Up to 10 Mb/s (for automated decoding of bus)
Decode Display	Start (green bracket) Address (yellow box) Missing Ack (red! symbol) Data (cyan box) Stop (red bracket)

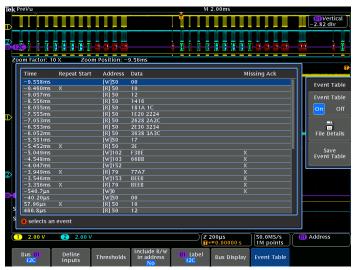

Event table for I²C bus with all captured packets time stamped and in a tabular view.

SPI Characteristics

Bus setup options

Sources (Clock, Slave Select,

MOSI, and MISO)

Analog channels 1-4

Digital channels D0-D15

Thresholds

Per-channel thresholds

Recommended probing

Single ended

Decode configuration

Paramater	Description
Framing	Idle Time (2-wire SPI)
	Slave Select (3-wire or 4-wire SPI)
Clock	Rising or Falling Edge
Slave select	Active High or Active Low
MOSI	Active High or Active Low
MISO	Active High or Active Low
Word size	4-32
Bit order	Most Significant (MS) First
	Least Significant (LS) First

Decode formats available

Hex, Binary

Display mode

Mode	Description
Bus	Bus only
Bus and waveforms	Simultaneous display of bus and logic waveforms
Event table	Decoded packet data in a tabular view



SPI Characteristics

Bus trigger and search options

Characteristic	Description
Trigger and/or Search On	SS Active
	Start of Frame
	MOSI
	MISO
	MOSI and MISO
	Data: maximum of 128 bits (up to four 32-bit words or 32 four-
	bit words)



Triggering on a specific MOSI data value on the SPI bus.

Bus decode

Characteristic	Description
Maximum Clock/Data Rate	Up to 50 Mb/s (for automated decoding of bus)
Decode display	Start (green bracket) Data (cyan box) Stop (red bracket)



Event table for SPI bus with all captured packets time stamped and in a tabular view.

RS-232/UART/RS-422/RS-485 Characteristics

BusSetupOptions-spectable2

Bus setup options

RS-232/UART Sources Analog channels 1-4 (Transmit and Receive) Digital channels D0-D15 RS-422/RS-485 Sources Analog channels 1-4

(Transmit and Receive)

Thresholds Per-channel thresholds

Recommended probing RS-232/UART: Single ended RS-422/RS-485: Differential **Polarity** RS-422/RS-485 Inverted (UART, RS-422/RS-485)

Decode configuration

Paramater	Description
Bit rate	
Pre-defined list of rates	50 b/s - 2.8 Mb/s
Custom	50 b/s - 10 Mb/s
Data bits	7, 8, or 9
Parity	None, Odd, or Even
Packets	On or Off
End of packet	00h (NUL) 0Ah (LF) 0Dh (CR) 20h (SP) FFh

Decode formats available Display modes

Hex, Binary, ASCII

Mode	Description
Bus	Bus only
Bus and waveforms	Simultaneous display of bus and logic waveforms
Event table	Decoded packet data in a tabular view




RS-232 bus setup, showing bit rate options for RS-232 bus.

RS-232/UART/RS-422/RS-485 Characteristics

Bus trigger and search options


Characteristic	Description
Trigger and/or Search On	Tx Start Bit
	Rx Start Bit
	Tx End of Packet
	Rx End of Packet
	Tx Data (number of bytes 1-10)
	Rx Data (number of bytes 1-10)
	Tx Parity Error
	Rx Parity Error

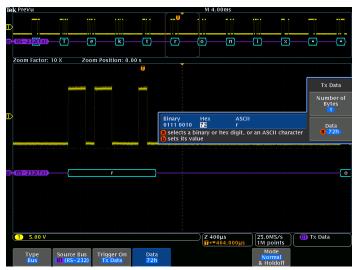

Triggering on a specific Tx data value on the RS-232 bus.

Bus decode


Characteristic	Description
Maximum Clock/Data Rate	Up to 10 Mb/s (for automated decoding of bus)
Decode display	Data (cyan box) Errors (red box) - Parity - Framing

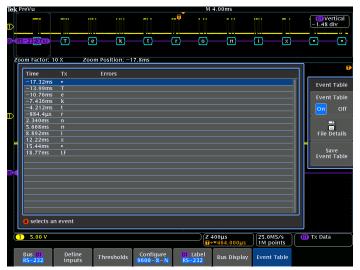

Event table for RS-232 bus with all captured packets time stamped and in a tabular view.

CAN, CAN FD (ISO and non-ISO) Characteristics

Bus setup options

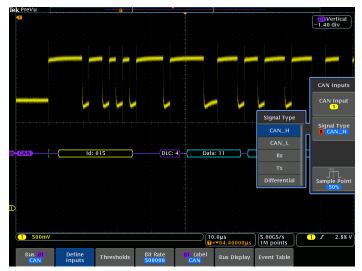

CAN bus setup, showing signal type options for CAN bus.

Source for CAN_H, CAN_L,

Rx, or Tx probing

Analog channels 1-4

Digital channels D0-D15

Source for differential probing

Recommended probing

Analog channels 1-4 Per-channel thresholds

Thresholds

TDP1500 differential probe

CAN_H, CAN_L, Rx, Tx: Single ended

Differential: Differential

Bit Rate

Parameter	Description
Standard: pre-defined list of rates and Custom	10 Kb/s - 1 Mb/s
FD: Pre-defined and custom	1 Mb/s - 10 Mb/s (7 M/bs MDO3K)

Sample Point

Position at 15% to 95% within bit period or unit interval

Decode formats available

Hex, Binary

Display modes

Parameter	Description
Bus	Bus only
Bus and waveforms	Simultaneous display of bus and logic waveforms
Event table	Decoded packet data in a tabular view

CAN, CAN FD (ISO and non-ISO) Characteristics

Bus trigger and search options

Characteristic	Description
Trigger and/or Search On ¹	Start of Frame
	Type of Frame (Data, Remote, Error, Overload)
	Identifier (Standard or Extended)
	Data (number of bytes 1-8, trigger or search when =, \neq , <, >, \leq
	≥)
	Identifier and Data
	End of Frame
	Missing Ack
	Bit Stuffing Error
	FD BRS Bit
	FD ESI Bit
	Form Error
	Any Error




Triggering on a specific data value on the CAN bus.

 $^{{\}small 1} \quad {\small \mathsf{FD}} \ \mathsf{BRS} \ \mathsf{Bit}, \\ {\small \mathsf{FD}} \ \mathsf{ESI} \ \mathsf{Bit}, \\ {\small \mathsf{Form}} \ \mathsf{Error} \ \mathsf{and} \ \mathsf{Any} \ \mathsf{Error} \ \mathsf{are} \ \mathsf{available} \ \mathsf{only} \ \mathsf{when} \ \mathsf{CAN} \ \mathsf{FD} \ \mathsf{is} \ \mathsf{selected} \ \mathsf{as} \ \mathsf{BUS} \\ \\ {\small \mathsf{EV}} \ \mathsf{EV} \ \mathsf{EV}$

CAN, CAN FD (ISO and non-ISO) Characteristics

Bus decode

Characteristic	Description
Decode display	Start (green bracket) Address (yellow box) DLC, CRC (purple box) Missing Ack (red! symbol) Data (cyan box) Stop (red bracket) Bit stuffing errors (red box)

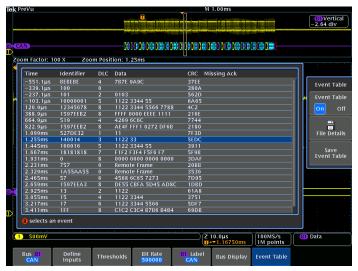

Event table for CAN bus with all captured packets time stamped and in a tabular view.

LIN Characteristics

Bus setup options

Source Analog channels 1-4

Digital channels D0-D15

Thresholds Per-channel thresholds

Recommended probing Single ended

Decode Configuration


Parameter	Description
Polarity	Normal or Inverted
Bit rate	
Pre-defined list of rates	1.2 kb/s - 19.2 kb/s
Custom	800 b/s - 100 kb/s
LIN standard	v1.x, v2.x, or Both
Include parity bits with ID	Yes or No

LIN Characteristics

Decode formats available Display modes

Mixed: ID and Parity are shown in Hex, Data and Checksum are shown in Binary Hex: all fields Binary: all fields

Mode	Description
Bus	Bus only
Bus and waveforms	Simultaneous display of bus and logic waveforms
Event Table	Decoded packet data in a tabular view

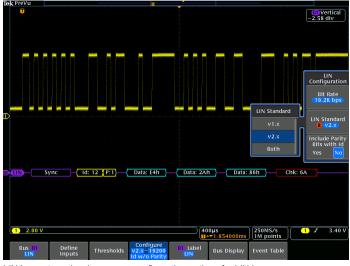

LIN bus setup, showing source configuration options for LIN bus.

Bus trigger and search options

Characteristic	Description
Trigger and/or Search On	Sync Identifier Data (number of bytes 1-8; trigger or search when =, ≠, <, >, ≤, ≥, inside range, outside range) Identifier and Data Wakeup Frame Sleep Frame Error (Sync, ID Parity, Checksum)




Triggering on a Sync Error on the LIN bus.

LIN Characteristics

Bus decode

Characteristic	Description
Maximum bit rate	Up to 1 Mb/s, by LIN definition up to 20 kb/s (for automated decoding of bus)
Decode display	Start (green bracket) Sync, Break (purple box) Identifier, Parity (yellow box) Data (cyan box) Checksum, Wakeup (purple box) End of frame (red bracket) Errors (red box) - Sync - Parity - Checksum - Header Time - Response Time - Frame Time - Response and Frame Time

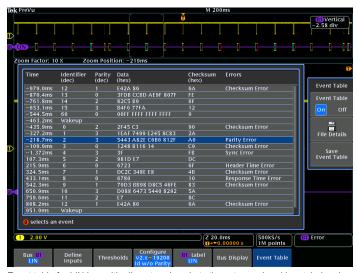

Event table for LIN bus with all captured packets time stamped and in a tabular view.

FlexRay Characteristics

Bus setup options

Source for single-ended

probing

Analog channels 1-4

Digital channels D0-D15

Source for differential probing

Analog channels 1-4

Thresholds

High and low thresholds per-channel

Recommended probing

Single ended or differential

Decode Configuration

Parameter	Description
Bit rate	2.5 Mb/s, 5 Mb/s, 10 Mb/s, or Custom (1 Mb/s - 100 Mb/s)
Channel type	A or B
Polarity	BDiff or BP, BM, Tx or Rx


FlexRay Characteristics

Decode formats available

Display modes

Mixed: Identifier, Payload Length and Cycle Count are shown in Decimal, Data and CRCs are shown in Hex. Hex: all fields Binary: all fields

Mode	Description
Bus	Bus only
Bus and waveforms	Simultaneous display of bus and logic waveforms
Event Table	Decoded packet data in a tabular view

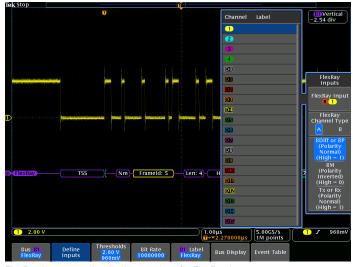

FlexRay bus setup, showing input options for FlexRay bus.


Bus trigger and search options

Characteristic	Description
Trigger and/or Search On	Start of Frame Indicator Bits (Normal, Null, Payload, Sync, Startup) Identifier (trigger when =, ≠, <, >, ≤, ≥, inside range, outside range) Cycle Count (trigger when =, ≠, <, >, ≤, ≥, inside range, outside range) Header Fields (Indicator Bits, Identifier, Payload Length, Header CRC, and Cycle Count) Data (number of bits 1-16; byte offset 'don't care' – 253; trigger when =, ≠, <, >, ≤, ≥, inside range, outside range) Identifier and Data End of Frame (Static, Dynamic (DTS), All) Error (Header CRC, Trailer CRC, Null Frame (static or dynamic), Sync Frame, Startup Frame)

FlexRay Characteristics

Bus decode

Characteristic	Description
Maximum bit rate	Up to 10 Mb/s (for automated decoding of bus)
Decode display	TSS (purple box) Start (green bracket) Frame ID (yellow box) Payload Length (purple box) Headers (purple box) - Null - Normal - Sync - Payload - Startup - Unknown - Null Sync - Payload Sync - Null Startup - Payload Startup - CRC - Cycle Count (yellow box) - Data (cyan box) - CRC, DTS, CID (purple box) - Stop (red bracket) - TSS - Header CRC - Trailer CRC - Null Frame - Sync Frame - Startup Frame - BSS
	- BSS - FSS

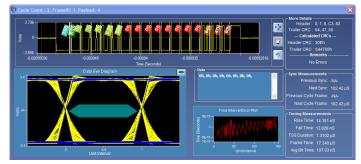

PC-based, eye-diagram analysis software builds an eye-diagram from the entire acquisition and plots it against TP1 mask called out by the FlexRay standard, available with MDO4000C instruments.

I²S/LJ/RJ/TDM Characteristics

Bus setup options

Sources (Clock, Word, Data) Analog channels 1-4

Digital channels D0-D15

Thresholds Per-channel thresholds

Single ended Recommended probing


Decode Configuration

Parameter	Description
Word size	4-32 bits
Clock	Rising or falling edge
Word Select polarity	Normal or inverted
Data High	1 or 0
Bit order	Most Significant (MS) First Least Significant (LS) First

Decode formats available Display modes

Signed Decimal, Hex, Binary

Mode	Description
Bus	Bus only
Bus and waveforms	Simultaneous display of bus and logic waveforms
Event Table	Decoded packet data in a tabular view

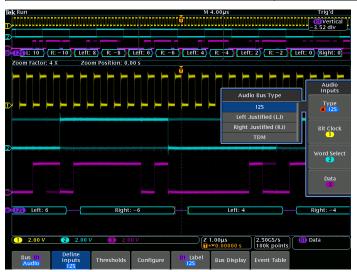


I²S bus setup, showing input configuration options for I²S bus.

I²S/LJ/RJ/TDM Characteristics

Bus trigger and search options


Characteristic	Description
Trigger and/or Search On	Word Select
	Frame Sync
	Data (select either word, left word, or right word; trigger or
	search when $=$, \neq ,<,>, \leq , \geq , inside range, outside range)

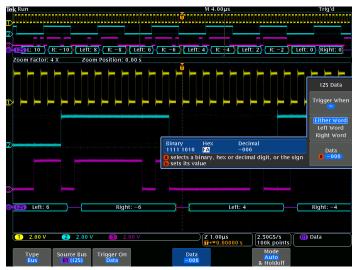

Triggering on a specific data value on the I2S bus.

Bus decode

Characteristic	Description
Maximum Clock/Data Rate	Up to 12.5 Mb/s (for automated decoding of I ² S/LJ/RJ bus) Up to 25 Mb/s (for automated decoding of TDM bus)
Decode display	Start (green bracket) Data (cyan box) Stop (red bracket

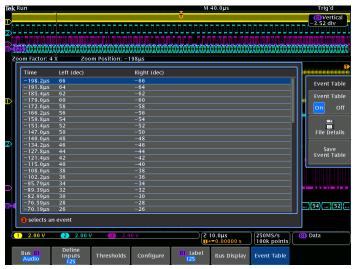

Start (green bracket) Data (cyan box) Stop (red bracket).

MIL-STD-1553 Characteristics

Bus setup options

Analog channels 1-4 Sources

Reference waveforms 1-4

Math waveform

Thresholds High and low threshold per source

Recommended probing

Single ended or differential (only one single-ended signal required)

Decode Configuration


Parameter	Description
Bit rate	1 Mb/s per the standard
Response Time	2 μs – 100 μs
Polarity	Normal or Inverted

Decode formats available

Mixed1: Hex (data), Decimal (addresses and count), Binary (bits) Mixed2: ASCII (data), Decimal (addresses and count), Binary (bits) Block Hex Hex and Binary Binary

Display modes

Mode	Description
Bus	Bus only
Bus and waveforms	Simultaneous display of bus and logic waveforms
Event Table	Decoded packet data in a tabular view

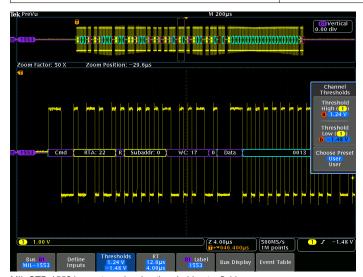


MIL-STD-1553 bus setup, showing threshold entry fields.

MIL-STD-1553 Characteristics

Bus trigger and search options

Characteristic	Description
Trigger and/or Search On	Sync Word Type ² (Command, Status, Data) Command Word² (set RT Address (=, ≠, <, >, ≤, ≥, inside range, outside range), T/R, Sub-address/Mode, Data Word Count/Mode Code, and Parity individually) Status Word² (set RT Address (=, ≠, <, >, ≤, ≥, inside range, outside range), Message Error, Instrumentation, Service Request Bit, Broadcast Command Received, Busy, Subsystem Flag, Dynamic Bus Control Acceptance (DBCA), Terminal Flag, and Parity individually) Data Word (user-specified 16-bit data value) Error (Sync, Parity, Manchester, Non-contiguous data) Idle Time (minimum time selectable from 4 μs to 100 μs; maximum time selectable from 12 μs to 100 μs; trigger on < minimum, > maximum, inside range, outside range)

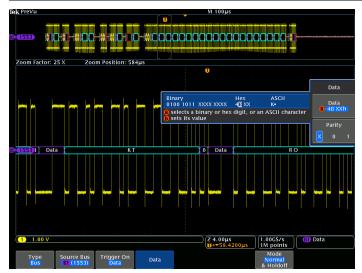


Triggering on a specific data value on the MIL-STD-1553 bus.

² Trigger selection of Command Word will trigger on Command and ambiguous Command/Status words. Trigger selection of Status Word will trigger on Status and ambiguous Command/Status words.

MIL-STD-1553 Characteristics

Characteristic	Description
Maximum Clock/Data Rate	Up to 1 Mb/s (for automated decoding of bus)
Decode Display	Start (green bracket) Sync ³ (purple box) with Word Type identified Address (yellow box) R/T (purple box) Word Count (purple box) Status Bits (purple box) Data (cyan box) Parity (purple box) Stop (red bracket) Errors (red box)

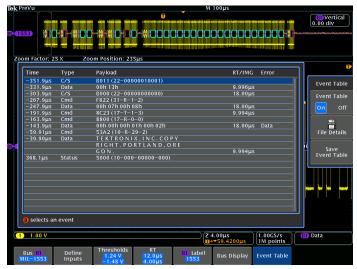

Event table for MIL-STD-1553 bus with all captured packets time stamped and in a tabular view.

USB Characteristics

Bus setup options USB 2.0 Compatibility

Low-speed and Full-speed: All MDO4000C or MDO3000 Series models

High-speed: Models with 1 GHz analog channel bandwidth

Sources Single-ended: Analog channels 1-4

Digital channels D0-D15

Differential: Analog channels 1-4, Math channel, Reference channels 1-4

Recommended probing

Low-speed and Full-speed: Single-ended or differential High-speed: Differential

Thresholds presents Low-speed and Full-speed: Single-ended (D+: 1.4 V; D-: -1.4 V), differential (High: 1.4 V; Low: -1.4 V) High-speed: Differential

(High: 100 mV; Low: -100 mV) High-speed: Differential (High: 100 mV; Low: -100 mV)

Ambiguous Command and Status words will be labeled with C/S and a generic bit decode will be displayed.


USB Characteristics

Decode formats available

Display modes

Mixed1: Frame and Address are shown in Decimal, Data shown in Hex Mixed2: Frame and Address are shown in Decimal, Data shown in ASCII Hex: all fields Binary: all fields

Mode	Description
Bus	Bus only
Bus and waveforms	Simultaneous display of bus and logic waveforms
Event Table	Decoded packet data in a tabular view

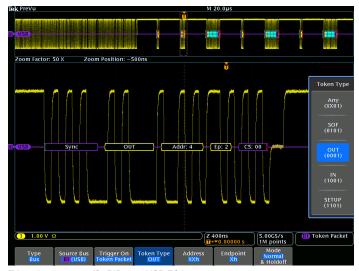

Triggering on a specific PID on a USB FS bus.

Bus decode

Characteristic	Description
USB 2.0 Data Rates	Low-speed: 1.5 Mb/s Full-speed: 12 Mb/s High-speed: 480 Mb/s
Decode Display	Start (green bracket) PID (yellow box) Data (cyan box) CRC (purple box) Stop (red bracket)



High-speed USB decoded display, automatically displaying bus content.

USB Characteristics

Bus trigger and search options

Characteristic	Description
Trigger and/or Search On	Low-speed: Trigger/Search on Sync, Reset, Suspend, Resume, End of Packet, Token (Address) Packet, Data Packet, Handshake Packet, Special Packet, Error. Token Packet – Any token type, SOF, OUT, IN, SETUP; Address can be further specified to trigger on ≤, <, =, >, ≥, ≠ a particular value, or inside or outside of a range. Frame number can be specified for SOF token using Binary, Hex, Unsigned Decimal, and Don't Care digits. Data Packet – Any data type, DATA0, DATA1; Data can be further specified to trigger on ≤, <, =, >, ≥, ≠ a particular data value, or inside or outside of a range. Handshake Packet – Any handshake type, ACK, NAK, STALL. Special Packet – Any special type, Reserved. Error – PID Check, CRC5, CRC16, Bit Stuffing.
	Full-speed: Trigger/Search on Sync, Reset, Suspend, Resume, End of Packet, Token (Address) Packet, Data Packet, Handshake Packet, Special Packet, Error. Token Packet – Any token type, SOF, OUT, IN, SETUP; Address can be further specified to trigger on ≤, <, =, >, ≠ a particular value, or inside or outside of a range. Frame number can be specified for SOF token using Binary, Hex, Unsigned Decimal, and Don't Care digits. Data Packet – Any data type, DATA0, DATA1; Data can be further specified to trigger on ≤, <, =, >, ≥, ≠ a particular data value, or inside or outside of a range. Handshake Packet – Any handshake type, ACK, NAK, STALL. Special Packet – Any special type, PRE, Reserved. Error – PID Check, CRC5, CRC16, Bit Stuffing.
	High-speed: Trigger/Search on Sync, Reset, Suspend, Resume, End of Packet, Token (Address) Packet, Data Packet, Handshake Packet, Special Packet, Error. Token Packet – Any token type, SOF, OUT, IN, SETUP; Address can be further specified to trigger on ≤, <, =, >, ≥, ≠ a particular value, or inside or outside of a range. Frame number can be specified for SOF token using Binary, Hex, Unsigned Decimal, and Don't Care digits. Data Packet – Any data type, DATA0, DATA1, DATA2, MDATA; Data can be further specified to trigger on ≤, <, =, >, ≥, ≠ a particular data value, or inside or outside of a range. Handshake Packet – Any handshake type, ACK, NAK, STALL, NYET. Special Packet – Any special type, ERR, SPLIT, PING, Reserved. SPLIT packet components that can be specified include: Hub Address Start/Complete – Don't Care, Start (SSPLIT), Complete (CSPLIT) Port Address Start and End bits – Don't Care, Control/Bulk/Interrupt (Full-speed Device, Low-speed Device), Isochronous (Data is Middle, Data is End, Data is Start, Data is All) Endpoint Type – Don't Care, Control, Isochronous, Bulk, Interrupt Error – PID Check, CRC5, CRC16

Ethernet compatibility 10BASE-T, 100BASE-TX On MDO4000C Series only Bus setup options

Sources Single-ended: Analog channels 1-4

Differential: Analog channels 1-4, Math channel, Reference channels 1-4

Recommended probing

10BASE-T: Single-ended or differential 100BASE-TX: Differential

Thresholds presents

10BASE-T: Single-ended (D+: 1.25 V; D-: 1.25 V); Differential (High: 1.25 V; Low: -1.25 V) 100BASE-TX: Single-ended (D+:


500 mV; D-: 500 mV); Differential (High: 500 mV; Low: -500 mV)

Decode formats available

Mixed1: Data is shown in Hex, all other fields are shown in either Decimal or Hex Mixed2: Data is shown in ASCII, all other fields are shown in either Decimal or Hex Hex: all fields Binary: all fields

Display modes


Mode	Description
Bus	Bus only
Bus and waveforms	Simultaneous display of bus and logic waveforms
Event Table	Decoded packet data in a tabular view

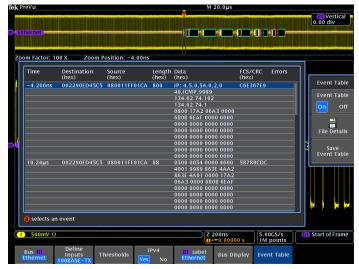

DPO4ENET 100BASE-TX decoded Event Table showing all packet information.

Bus decode


Characteristic	Description
Ethernet Data Rates	10BASE-T: 10 Mb/s 100BASE-TX: 100 Mb/s
Decode Display	Start (green bracket) MAC Address (yellow box) Data (cyan box) IPv4 Header (white box) TCP Header (brown box) CRC (purple box) Stop (red bracket) Error (red box)
Internet Protocol Support	IPv4
Transport Layer Protocol Support	TCP

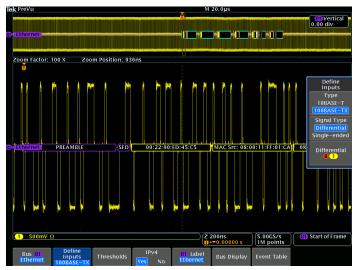

Color-coded DPO4ENET display of 100BASE-TX.

Display modes


Mode	Description
Bus	Bus only
Bus and waveforms	Simultaneous display of bus and logic waveforms
Event table	Decoded packet data in a tabular view

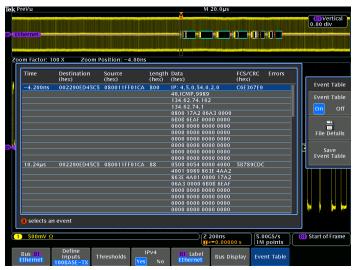

DPO4ENET 100BASE-TX decoded Event Table showing all packet information.

Bus trigger options

Option	Description		
Trigger and/or Search On	10BASE-T: Start Frame Delimiter MAC Addresses: Trigger on Source and Destination 48-bit address values MAC Q-tag Control Information: Trigger on Q-tag 32-bit value MAC Length/Type: Trigger on ≤, <, =, >, ≥, ≠ a particular 16-bit value, or inside or outside of a range MAC Client Data: Trigger on ≤, <, =, >, ≥, ≠ a particular 16-bit value, or inside or outside of a range. Selectable number of bytes to trigger on from 1-16. Byte offset options of Don't Care, 0-1499 IP Header: Trigger on IP header 8-bit value, Source Address, Destination Address TCP Header: Trigger on Destination Port, Source Port, Sequence Number, and Ack Number TCP/IPv4 Client Data: Trigger on ≤, <, =, >, ≥, ≠ a particular data value, or inside or outside of a range. Selectable number of bytes to trigger on from 1-16. Byte offset options of Don't Care, 0-1499 End of Packet FCS (CRC) Error		
	100BASE-TX: Start Frame Delimiter MAC Addresses: Trigger on Source and Destination 48-bit address values MAC Q-tag Control Information: Trigger on Q-tag 32-bit value MAC Length/Type: Trigger on ≤, <, =, >, ≥, ≠ a particular 16-bit value, or inside or outside of a range MAC Client Data: Trigger on ≤, <, =, >, ≥, ≠ a particular data value, or inside or outside of a range. Selectable number of bytes to trigger on from 1-16. Byte offset options of Don't Care, 0-1499 IP Header: Trigger on IP header 8-bit value, Source Address, Destination Address TCP Header: Trigger on Destination Port, Source Port, Sequence Number, and Ack Number TCP/IPv4 Client Data: Trigger on ≤, <, =, >, ≥, ≠ a particular data value, or inside or outside of a range. Selectable number of bytes to trigger on from 1-16. Byte offset options of Don't Care, 0-1499 End of Packet FCS (CRC) Error Idle		

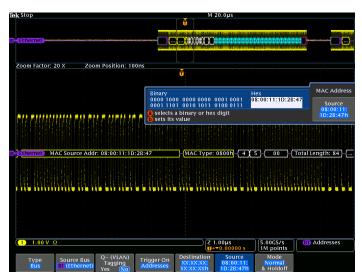

DPO4ENET triggering on a specific 10BASE-T MAC source address.

Ordering information

Current/discontinued products

Current products

Serial Bus	MDO4000C Series Module	MDO3000 Series Module	MSO/DPO2000B Series Module
I ² C, SPI ⁴	DPO4EMBD	MDO3EMBD	DP02EMBD
RS-232 / 422 / 485 / UART	DPO4COMP	MDO3COMP	DP02COMP
CAN/CAN FD, LIN	DPO4AUTO	MDO3AUTO	DPO2AUTO
FlexRay		MDO3FLEX	
CAN/CAN FD, LIN, FlexRay	DPO4AUTOMAX 5		
I ² S/LJ/RJ/TDM ⁶	DPO4AUDIO	MDO3AUDIO	
MIL-STD-1553	DPO4AERO	MDO3AERO	
USB 7	DPO4USB	MDO3USB	
Ethernet 8	DPO4ENET		

Discontinued products

Serial Bus	MSO/DPO4000B and MDO4000/B Series Module	MSO/DPO4000 Series Module	MSO/DPO3000 Series Module	MSO/DPO2000 Series Module
I ² C, SPI ⁴	DPO4EMBD	DPO4EMBD	DP03EMBD	DPO2EMBD
RS-232 / 422 / 485 / UART	DPO4COMP	DPO4COMP	DPO3COMP	DPO2COMP
CAN, LIN	DPO4AUTO	DPO4AUTO	DPO3AUTO	DPO2AUTO
FlexRay			DP03FLEX	
CAN, LIN, FlexRay	DPO4AUTOMAX ⁵	DPO4AUTOMAX ⁵		
I ² S/LJ/RJ/TDM ⁶	DPO4AUDIO	DPO4AUDIO	DPO3AUDIO	
MIL-STD-1553	DPO4AERO	DPO4AERO	DPO3AERO	
USB 7	DPO4USB	DPO4USB		
Ethernet 8	DPO4ENET			

Recommended probes

Please refer to www.tek.com/probes for further information on the recommended models of probes and any necessary probe adapters.





Tektronix is registered to ISO 9001 and ISO 14001 by SRI Quality System Registrar.

- SPI support is limited to 2-wire SPI only on models that have only 2 analog channels and no digital channels.
- DPO4AUTOMAX includes a PC-based software package for FlexRay eye diagram analysis.
- Not available on models that have only 2 analog channels and no digital channels.
- USB LS/FS triggering and decode available on all models in all indicated product families. HS decode available only on 1 GHz models. HS triggering only available on 1 GHz models in MSO/DPO4000B and MDO4000/B/C Series.
- 100BASE-TX requires ≥ 350 MHz model.

Serial Triggering and Analysis Application Modules

Datasheet

ASEAN / Australasia (65) 6356 3900 Belgium 00800 2255 4835* Central East Europe and the Baltics +41 52 675 3777 Finland +41 52 675 3777 Hong Kong 400 820 5835 Japan 81 (3) 6714 3086 Middle East, Asia, and North Africa +41 52 675 3777 People's Republic of China 400 820 5835 Republic of Korea +822 6917 5084, 822 6917 5080 Spain 00800 2255 4835* Taiwan 886 (2) 2656 6688 Austria 00800 2255 4835*
Brazil +55 (11) 3759 7627
Central Europe & Greece +41 52 675 3777
France 00800 2255 4835*
India 000 800 650 1835
Luxembourg +41 52 675 3777
The Netherlands 00800 2255 4835*
Poland +41 52 675 3777
Russia & CIS +7 (495) 6647564
Sweden 00800 2255 4835*
United Kingdom & Ireland 00800 2255 4835*

Balkans, Israel, South Africa and other ISE Countries +41 52 675 3777
Canada 1 800 833 9200
Denmark +45 80 88 1401
Germany 00800 2255 4835*
Italy 00800 2255 4835*
Mexico, Central/South America & Caribbean 52 (55) 56 04 50 90
Norway 800 16098
Portugal 80 08 12370
South Africa +41 52 675 3777
Switzerland 00800 2255 4835*

USA 1 800 833 9200

* European toll-free number. If not accessible, call: +41 52 675 3777

For Further Information. Tektronix maintains a comprehensive, constantly expanding collection of application notes, technical briefs and other resources to help engineers working on the cutting edge of technology. Please visit www.tek.com.

Copyright © Tektronix, Inc. All rights reserved. Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. TEKTRONIX and TEK are registered trademarks of Tektronix, Inc. All other trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

19 Apr 2017 3GW-26221-10

www.tektronix.com

